

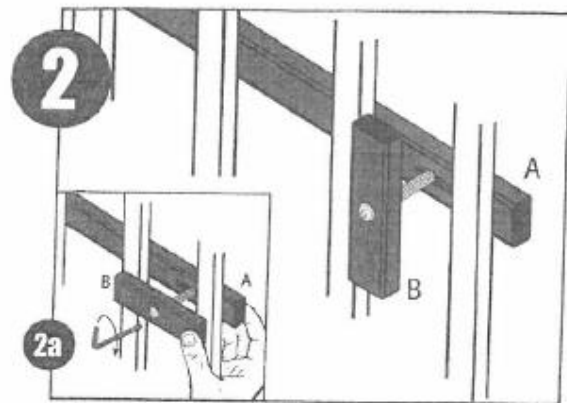
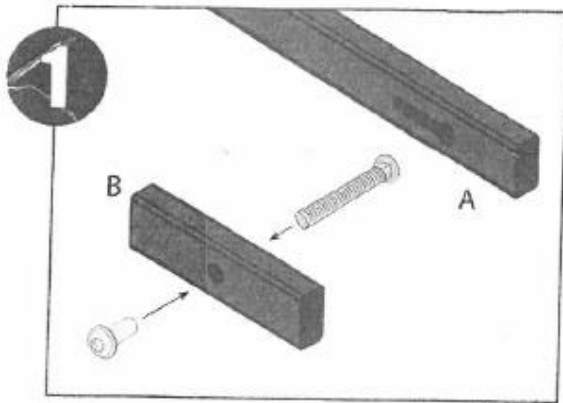


## Rail kit installation instructions

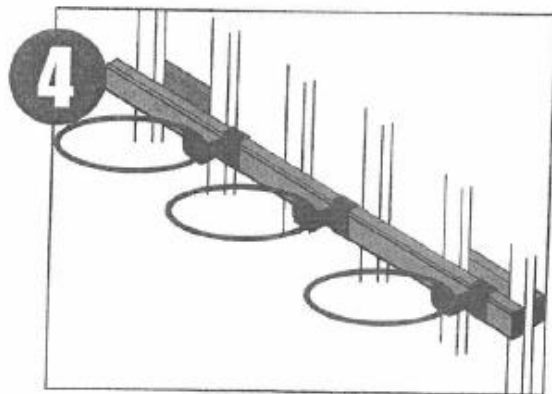

1. Insert sleeve nuts into two two Rail As and loosely screw bolt\* into the other side. \*There are 3 bolt lengths included, choose the one that fits your rail depth.
2. Attach Rail A to Rail B by sliding round bolt end into key slot.\* \*Insert both round bolt ends of the 2 Rail B's into key slots of Rail A. Both Rail B's will now be hanging vertically from the long Rail A. While holding the 2 Rails in place on either side of the spindles. (2a) turn one of the B Rails parallel to Rail A. Position the connection directly in the middle of two spindles and tighten just snug enough to hold, follow the same step for the other side.

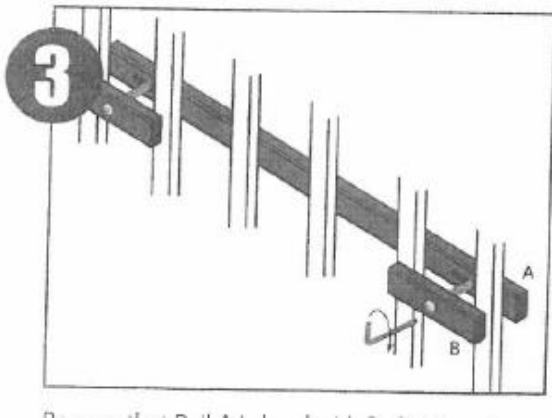

3. Be sure that Rail A is level with Rail(s) B and tighten until very snug. Check tightness once a month.
4. Snap on your Accessories!